


## STOWAWAY VISOR **USER INFORMATION**

THIS EYE PROTECTOR CONFORMS WITH EN 166:1995 AND IS ONLY SUITABLE FOR THE USES MARKED ON THE LENS



NOTIFIED BODY No 0194 INSPEC CERTIFICATION LTD. UPPER WINGBURY COURTY ARD. WINGRAVE. AYLESBURY. BUCKS. HP22


IF THE LENS BECOMES SCRATCHED OR DAMAGED IT SHOULD BE REPLACED, STORE OUT OF DIRECT SUNLIGHT AND AWAY FROM CHEMICALS AND ABRASIVE SUBSTANCES. THE VISOR SHOULD BE CLEANED WITH MILD DETERGENT IN WARM WATER, AND USE ONLY SOFT CLEAN CLOTHS. IT IS POSSIBLE THAT THE VISOR AND NOSEPIECE MAY CAUSE ALLERGIC SKIN REACTIONS WITH SUSCEPTIBLE INDIVIDUALS.

## FITTING INSTRUCTIONS

FIGURE 1. PUSH CLIP THROUGH HOLE IN HELMET INNER RIM.

FIGURE 2. POSITION VELCRO STRIP VERTICALLY IN SIDE FRONT OF HELMET SHELL PLACE THE VISOR IN THE HELMET WITH THE FRICTION FINGER BETWEEN HEADBAND AND HELMET SHELL.

FIGURE 3. ALIGN AT 90 DEGREES AND PUSH THE SLOT IN THE VISOR OVER THE CLIP TURNING TO SECURE

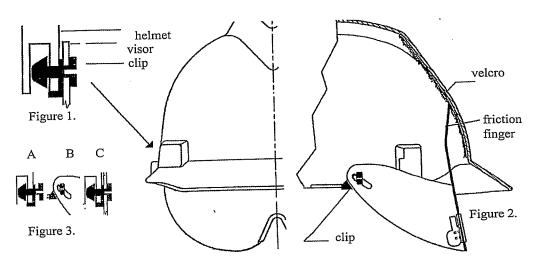

MSA (Britain) LTD. EAST SHAWHEAD. COATBRIDGE. ML5 4TD. SCOTLAND. STOWAWAY INSTRUCTIONS 10002673 REVISION 5 05.00